




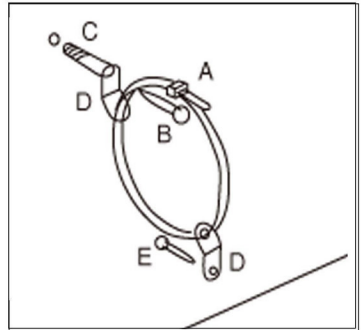


Anti-tipping Restraint Instructions

	PARTS DESCRIPTION	PARTS IMAGE	QTY
A	nylon strap		1PC
B	long screw		1PC
C	plastic screw anchor		1PC
D	wall brackets		2PCS
E	short screw		1PC



ASSEMBLY

- When properly installed, this hardware can provide protection against the unexpected tipping of furniture.
- Attach one of the mounting brackets “D” and secure to the back top edge of the furniture using the short screw “E”.
- Mark the location on the wall for mounting the second bracket “D”. Create the appropriate sized hole in the wall and insert the plastic screw anchor “C”. Secure the bracket to the wall using the long screw “B”.
- Place the furniture so the bracket on the back edge of unit is line with the bracket on the wall.
- Lace an end of the nylon restraint strap “A” down through each bracket. Bring both ends together and slide the beaded end of the strap through the keyhole shaped slot on the other end. Pull down on the beaded end until it snap-locks into the keyhole.
- Check to make sure the strap is securely laced and locked to the brackets.

HARDWARE

